

User Manual

簡易版

BM1012



deco

基本仕様

- ・ 入力電圧 100V-240V, 50/60Hz
- ・ 消費電力 135W
- ・ サイズ 176 × 293 × 328
- ・ 重量 5.6kg
- ・ 光源 10W × 12粒
4in1 RGBW
- ・ 照射角 15°
- ・ chモード 10/13
- ・ IP 20
- ・ 制御モード DMX512
- ・ 3PinDMX IN/OUT

deco

本体設定

【MENU】

DMX Address	001-512	
Option	Pan invert	Yes/No
	Tilt invert	Yes/No
	P/T swap	Yes/No
	P/T Feedback	Yes/No
	Dimmer mode	Dimmer 1-4
	CH mode	10ch/13ch
	(Calibrate XY)	X-127-128 Y-127-128
Display	Language	English
	Lightness	01-30
	Backlight	Permanently on/2Minutes off
Manual control	Red	000-255
	Green	000-255
	Blue	000-255
	White	000-255
	Shut	000-255
	Color wheel	000-255
	Pan	000-255
	Pan Fine	000-255
	Tilt	000-255
	Tilt Fine	000-255
	Speed	000-255
Test operation	Sound	Running. . .
	Auto	Running. . .
Power reduction	100%/80%/50%	
Resume default	Yes/No	
Send parametar	Yes/No	Sending current setting to other fixture, when receive successfully will generate a reset.
Fixture reset	Yes/No	



DMX PROTOCOL

deco

10ch	13ch	Value	Function
1	1	0-255	Dimmer All
2	2	0-255	Red
3	3	0-255	Green
4	4	0-255	Blue
5	5	0-255	White
6	6	0-10	No strobe
		11-90	Strobe, slow→fast
		91-170	Random Strobe, slow→fast
		171-255	Electronic Squarewave, slow→fast
-	7		Virtual color wheel
		0-10	No effect
		11	Blue (Blue=full, Red+Green+White=0) (step)
		12-50	Red=0, Green→up, Blue=full, White=0 (proportional)
		51	Light Blue (Red=0, Green=full, Blue=full, White=0) (step)
		52-90	Red=0, Green=full, Blue→down, White=0 (proportional)
		91	Green (Red=0, Green=full, Blue=0, White=0) (step)
		92-130	Red→up, Green=full, Blue=0, White=0 (proportional)
		131	Yellow (Red=full, Green=full, Blue=0, White=0) (step)
		132-170	Red=full, Green→down, Blue=0, White=0 (proportional)
		171	Red (Red=full, Green=0, Blue=0, White=0) (step)
		172-210	Red=full, Green=0, Blue→up, White=0 (proportional)
		211	Magenta (Red=full, Green=0, Blue=full, White=0) (step)
		212-250	Red→down, Green=0, Blue=full, White=0 (proportional)
251	Blue (Red=0, Green=0, Blue=full, White=0) (step)		
		252-255	Sound control color
7	8	0-255	Pan
-	9	0-255	Pan Fine
8	10	0-255	Tilt
-	11	0-255	Tilt Fine
9	12	0-255	Speed (Fast→Slow)
10	13	0-10	Use menu setting dimmer
		11-20	Dimmer off
		21-30	Dimmer 1
		31-40	Dimmer 2
		41-50	Dimmer 3
		51-60	Dimmer 4
		61-254	Use menu setting dimmer
		255	Reset (at least 5S)