

User Manual

簡易版

PIXEL 715



deco

基本仕様

- ・ 入力電圧 AC90-260V, 50/60Hz
- ・ 消費電力 150W
- ・ サイズ 210 × 300 × 380
- ・ 重量 7.5Kg
- ・ 光源 15W × 7粒, 4in, RGBW
- ・ 照射角 4-60° 電子リニアズーム
- ・ 制御モード DMX512/マスタースレーブ機能
- ・ chモード 21/35/42/49/56
- ・ IP 20
- ・ 3PinDMX IN/OUT

deco

本体設定



MENU	Address	001-512			
	Intro	Reset	No/Yes		
		Run	DMX512		
			Auto1		
			Auto2		
			Auto3		
			Sound1		
			Sound2		
			Slave		
	Mode	21ch			
		35ch			
		42ch			
		49ch			
		56ch			
	Tste	All			
		Pan & Tilt			
		LED			
	Set	Disp,Set	Filpdisp	ON/OFF	
			Keylock	ON/OFF	
			Disp flash	ON/OFF	
			Shuttime	002/060	
		Pan	Normal		
			Reverse		
		Tilt	Normal		
			Reverse		
	Info	Time Info	Power on	003ch	
			Til Life Hrs	028ch	
			Last Run Hrs	003ch	
Soft Ver		V1.1			

DMX PROTOCOL

deco

21ch	35ch	42ch	49ch	56ch	Function	Values	Description
1	1	1	1	1	Red	0-255	0-100%Line red dimmer
2	2	2	2	2	Red Fine	0-255	Fine control of red
3	3	3	3	3	Green	0-255	0-100%Line green dimmer
4	4	4	4	4	Green Fine	0-255	Fine control of red
5	5	5	5	5	Blue	0-255	0-100%Line blue dimmer
6	6	6	6	6	Blue Fine	0-255	Fine control of red
7	7	7	7	7	White	0-255	0-100%Line white dimmer
8	8	8	8	8	White Fine	0-255	Fine control of red
9	9	9	9	9	Linear CTO	0-255	Linear color temperature from2500K-8000K
							0-009 Macro color OFF
							10 Red
							11 Green
							12 Blue
							13 Cyan
							14 Yellow
							15 Magenta
							16 White 7000K
							17 White 3700K
							18 White 5000K
							19 Black
							020-022 Medium Yellow
							023-026 Straw Tint
							027-028 Surprise Peach
							29 Fire
							30 Medium Amber
							31 Gold Amber
							032-034 Dark Amber
							035-044 Sunrise Red
							45 Light Pink
							046-048 Medium Pink
							049-061 Pink Carnation
							062-067 Light Lavender
							068-077 Lavender
							078-088 Sky Blue
							089-099 Just Blue
							100-109 Dark yellow green
							110-111 Spring Yellow
							112 Light Amber
							113 Straw
							114 Deep Amber
							115-116 Orange
10	10	10	10	10	Macro Color		117 Light Rose
							118 English Rose
							119 Light Salmon
							120 Middle Rose
							121-122 Dark Pink
							123-124 Magenta
							125 Peacock Blue
							126 Med Blue Green
							127 Steel Blue
							128 Light Blue
							129-130 Dark Blue
							131-133 Leaf Green
							134-135 Dark Green
							136-137 Mauve
							138-141 Bright Pink
							142-144 Medium Blue
							145 Deep Golden Amber
							146 Pale Lavender
							147-148 Special lavender
							149-150 Primary Green
							151-156 Bright Blue
							157-161 Apricot
							162-167 Pale Gold
							168-171 Deep Orange
							172-173 Bastardb Amber
							174 Flame Red
							175-178 Daylight Blue
							179 Lilac Tint
							180-183 Deep lavender
							184-190 Dark Steel Blue
							191-206 Conho Blue
							207 Alice Blue
							208 Dirty White
							209-255 White

DMX PROTOCOL

deco

11	11	11	Strobe	0	LED ON
				1-99	Strobe effect (Slow)
				100-127	Random strobe effect
				128-255	Strobe effect (Slow to fast)
12	12	12	Dimmer	0-255	0-100% Liner dimmer
13	13	13	Dimmer Fine	0-255	Fine control of dimmer
14	14	14	PAN	0-255	0~540° PAN movement
15	15	15	PAN Fine	0-255	Fine control of PAN
16	16	16	TILT	0-255	0-230° TILT movement
17	17	17	TILT Fine	0-255	Fine control
18	18	18	No Function		
19	19	19	Reset	0-64	No Function
				65-128	Auto running
				129-192	Sound control
				193-255	Reset
20	20	20	Zoom	0-255	0-100% Liner zoom
21	21	21	Zoom Rotation	0-127	Rotation adjustment
				128-191	Forward rotation from slow of fast
				192-255	Backward rotation from slow of fast
		22	Internal Programs	0-20	No Function
				21-27	Internal Program 1
				28-35	Internal Program 2
				36-43	Internal Program 3
				44-51	Internal Program 4
				52-59	Internal Program 5
				60-251	Internal Program 6-29(One program by each 7 Value)
252-255	Internal Program 30				
		23	Speed	0-255	Speed control of Internal Program from fast to slow
		24	No Function		
		25	Foreground Red	0-255	Foreground Red
		26	Foreground Green	0-255	Foreground Green
		27	Foreground Blue	0-255	Foreground Blue
		28	Foreground White	0-255	Foreground White
		29	Foreground Dimmer	0-255	Foreground Dimmer
		30	Background Dimmer	0-255	Background Dimmer
		31	No Function		
		32	No Function		
		33	Foreground Strobe	0	No Function
				1-255	Foreground strobe effect
		34	Background Strobe	0	No Function
				1-255	Background strobe effect
		35	Background Color Selection	0-28	No Function
				29-57	Red
				58-86	Green
				87-115	Blue
				116-144	White
				145-173	Red+Green
				174-202	Red+Blue
				203-231	Green+Blue
232-255	Red+Green+Blue				

DMX PROTOCOL

22	22	36	LED 1 Red	0-255	LED 1 Red dimmer
23	23	37	LED 1 Green	0-255	LED 1 Green dimmer
24	24	38	LED 1 Blue	0-255	LED 1 Blue dimmer
	25		LED 1 White	0-255	LED 1 White dimmer
25	26	39	LED 2 Red	0-255	LED 2 Red dimmer
26	27	40	LED 2 Green	0-255	LED 2 Green dimmer
27	28	41	LED 2 Blue	0-255	LED 2 Blue dimmer
	29		LED 2 White	0-255	LED 2 White dimmer
28	30	42	LED 3 Red	0-255	LED 3 Red dimmer
29	31	43	LED 3 Green	0-255	LED 3 Green dimmer
30	32	44	LED 3 Blue	0-255	LED 3 Blue dimmer
	33		LED 3 White	0-255	LED 3 White dimmer
31	34	45	LED 4 Red	0-255	LED 4 Red dimmer
32	35	46	LED 4 Green	0-255	LED 4 Green dimmer
33	36	47	LED 4 Blue	0-255	LED 4 Blue dimmer
	37		LED 4 White	0-255	LED 4 White dimmer
34	38	48	LED 5 Red	0-255	LED 5 Red dimmer
35	39	49	LED 5 Green	0-255	LED 5 Green dimmer
36	40	50	LED 5 Blue	0-255	LED 5 Blue dimmer
	41		LED 5 White	0-255	LED 5 White dimmer
37	42	51	LED 6 Red	0-255	LED 6 Red dimmer
38	43	52	LED 6 Green	0-255	LED 6 Green dimmer
39	44	53	LED 6 Blue	0-255	LED 6 Blue dimmer
	45		LED 6 White	0-255	LED 6 White dimmer
40	46	54	LED 7 Red	0-255	LED 7 Red dimmer
41	47	55	LED 7 Green	0-255	LED 7 Green dimmer
42	48	56	LED 7 Blue	0-255	LED 7 Blue dimmer
	49		LED 7 White	0-255	LED 7 White dimmer

deco